



### HELPFUL HINT:

For ease of use, lift the push handle upwards during the entire recline process.

## RECLINE POSITION

### Step: 1

#### Rotate Push Handle downward:

Push-in the **Grey Push Buttons** located on the side of the **Push Handle**, at the same time, rotate the **Push Handle** downward. (fig. 1 & 2)



**Fig. 1**  
Grey Push Button



**Fig. 2**  
Rotate Push Handle Downward

### Step: 2

#### Recline the seat back:

Lift **Push Handle** upward (fig. 3) to relieve the occupant's weight. At the same time, pull upwards on the **Recline Pull Loop** (fig. 4), and recline the seat back to desired position. (fig. 5)



**Fig. 3**  
Lift Push Handle Upwards



**Fig. 4**  
Pull Upwards on Recline Pull Loop



**Fig. 5**  
Recline the Seat Back

## UPRIGHT POSITION

To return seat back to upright position repeat steps 1 & 2. Push seat back up to bring upright, instead of reclining down.

If you have any questions concerning the Recline Function, please call our Sales Department at (888) 266-8243 or (310) 618-0111.